 


# DNHP Manual

 
**A - 1**

## EXHEAD ASSY

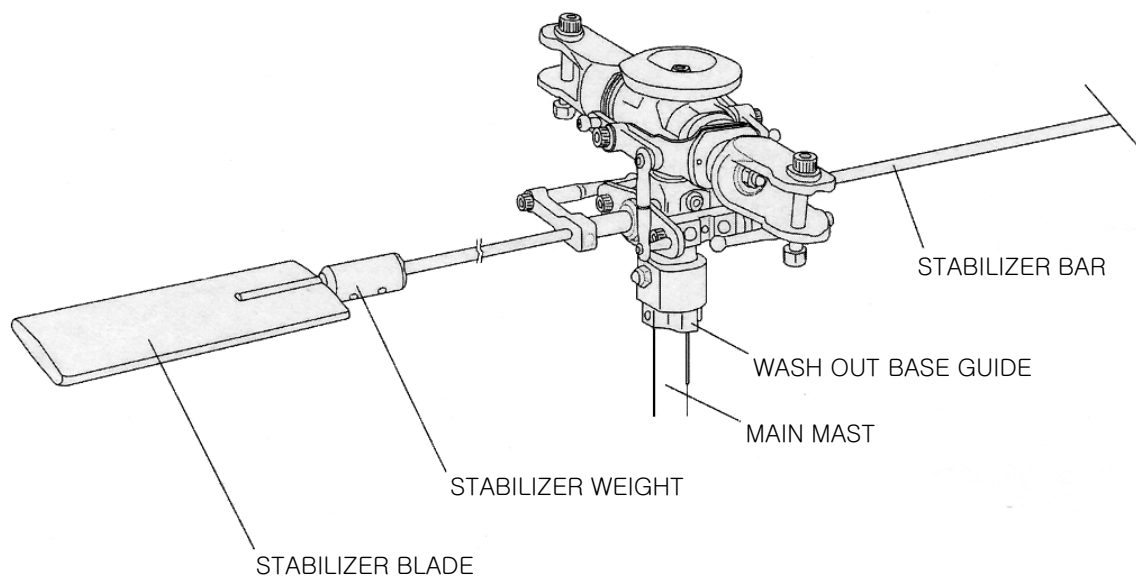

**A - 2**



## MAIN ROTOR GRIP & MIXING ARM

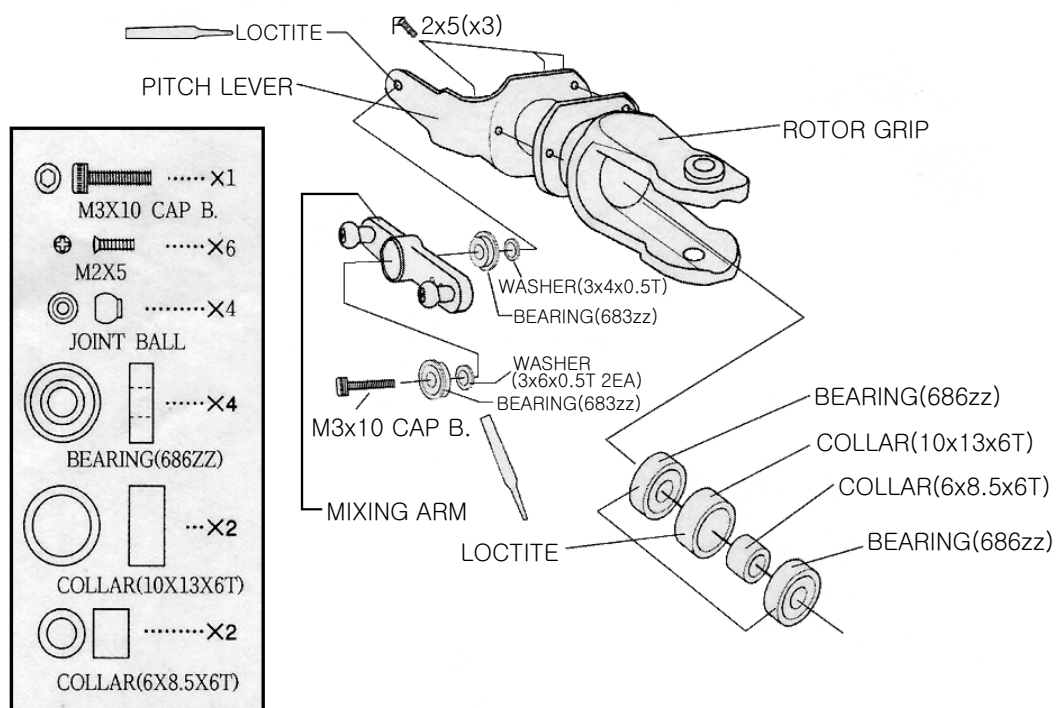

# DNHP Manual



## A - 3
  
### ASSEMBLING WASH OUT SET

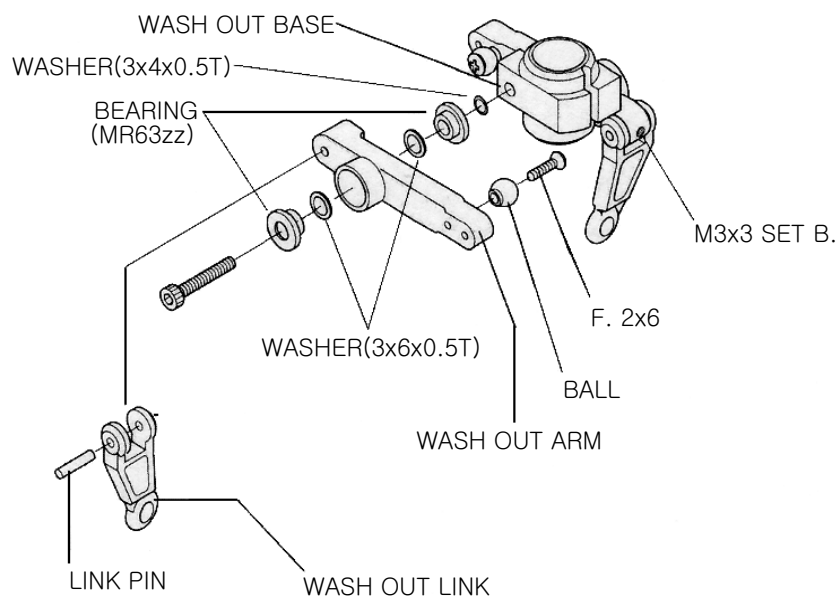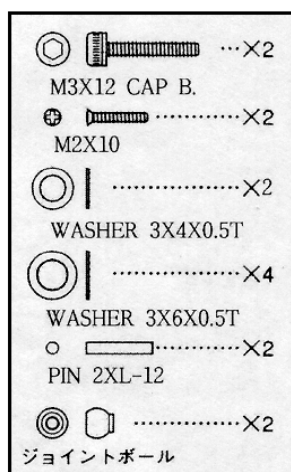



## A - 4
  
### ASSEMBLING SWASH PLATE

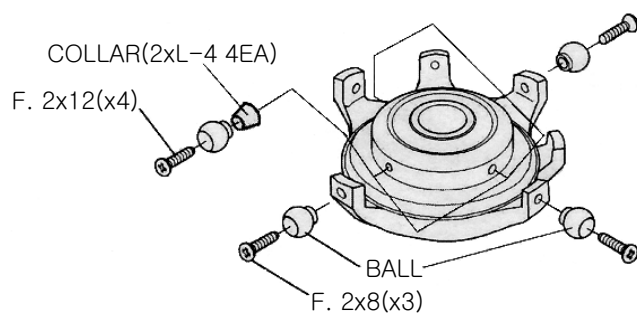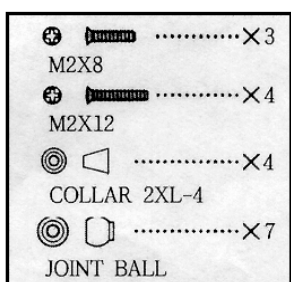


## A - 5

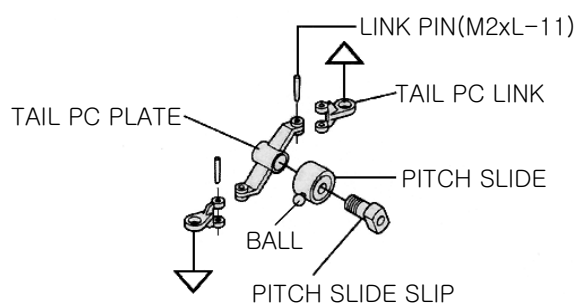  

 
 
### ASSEMBLING TAIL PITCH SET



## 4 - 1
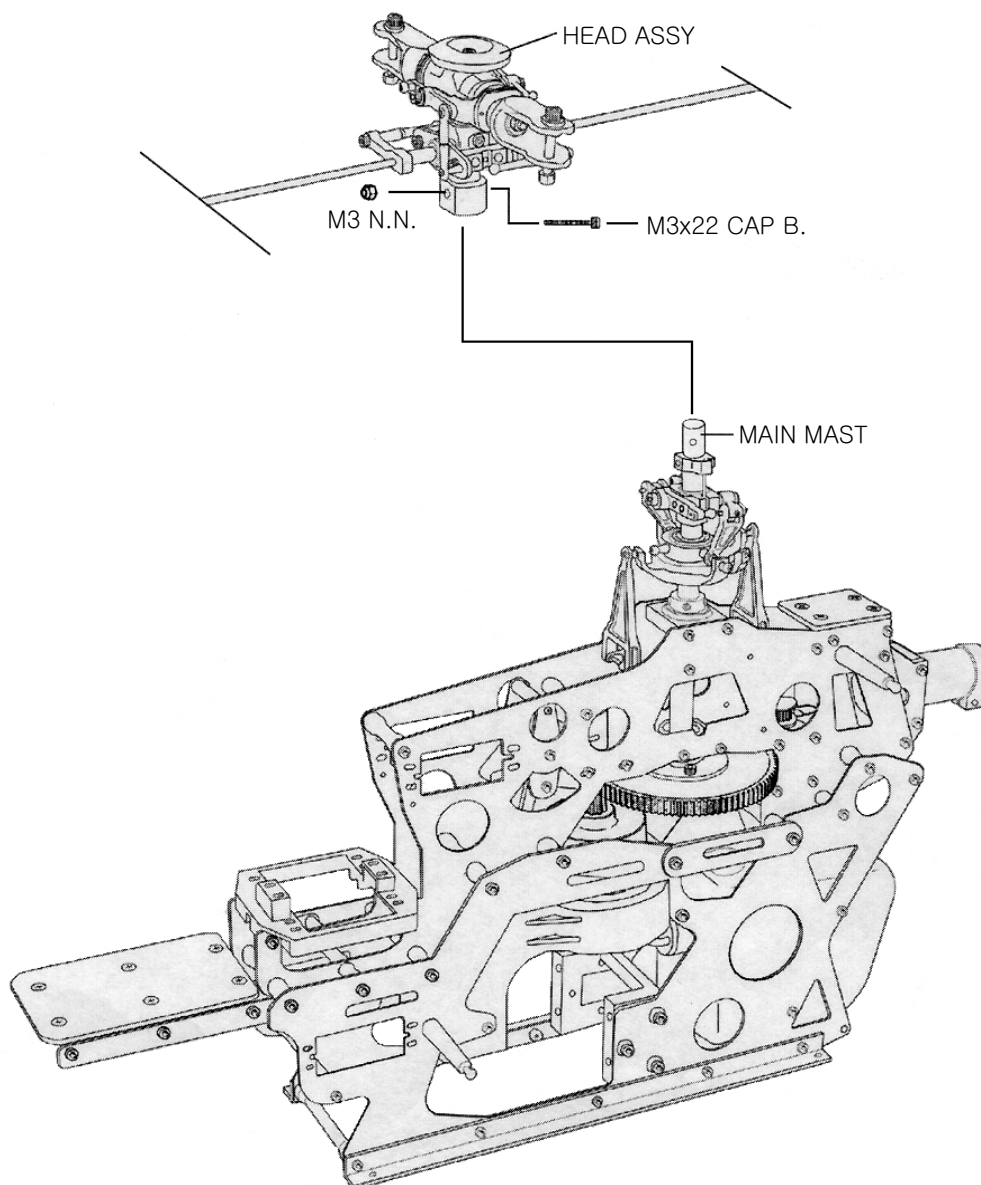
## INSTALLATION ROTOR HEAD

 
 


		X1
M3X22 CAP B.		
		.....X1
M3 N.N.		

# DNHP Manual


## 4 - 1

### INSTALLATION STABILIZER BAR

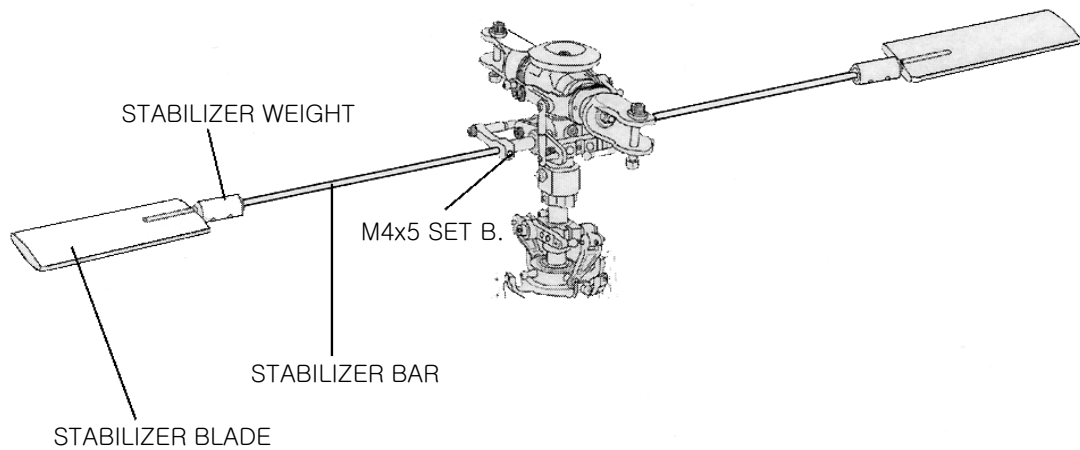

## 4 - 3

 
### INSTALLATION STABILIZER BLADE

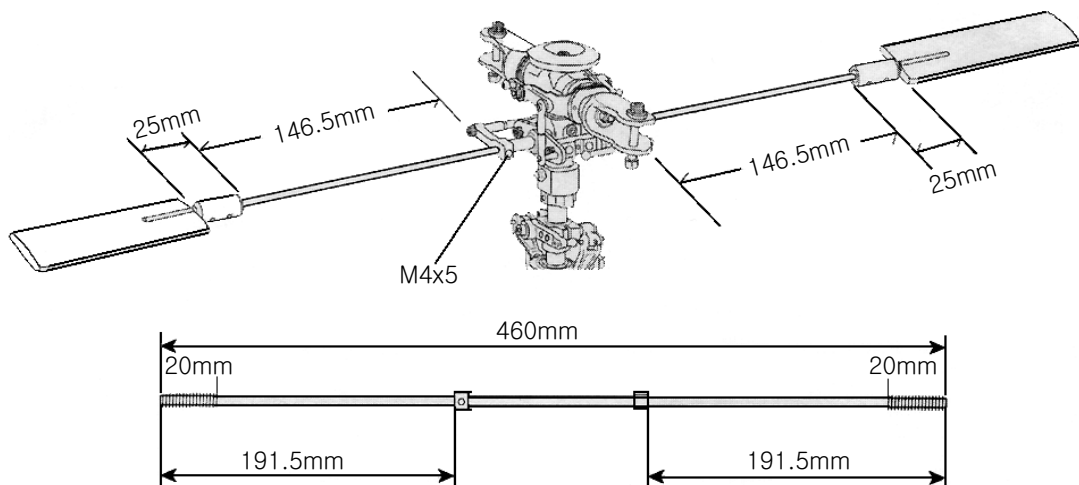


# DNHP Manual

## 4 - 4

 
### INSTALLATION ROD

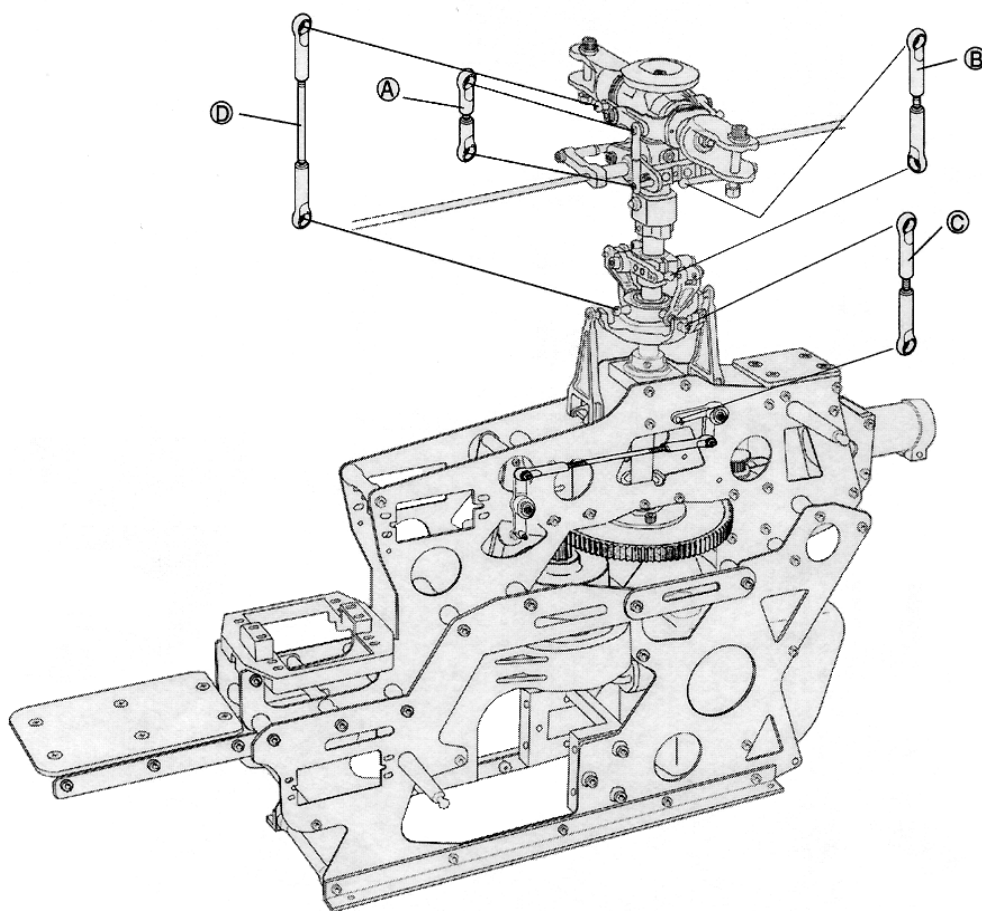


**A** REAR PITCH ROD

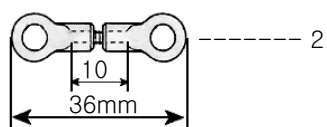 


**C** WASH OUT ARM-STABILIZER LEVER

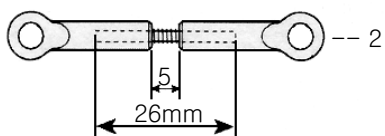 

**B** SWASH PLATE-BELL CRANK(AIL)

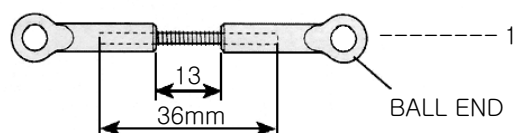 


**D** SWASH PLATE-MIXING ARM

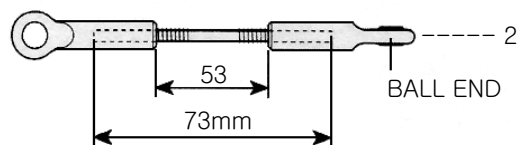 

# DNHP Manual


## 5 - 1
 
### INSTALLATION REAR GEAR

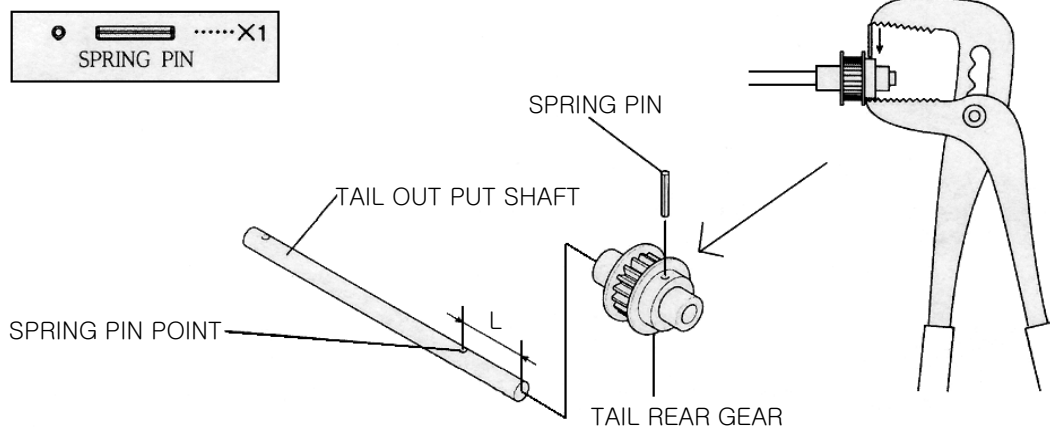

## 5 - 2

 
### ASSEMBLING TAIL CASE

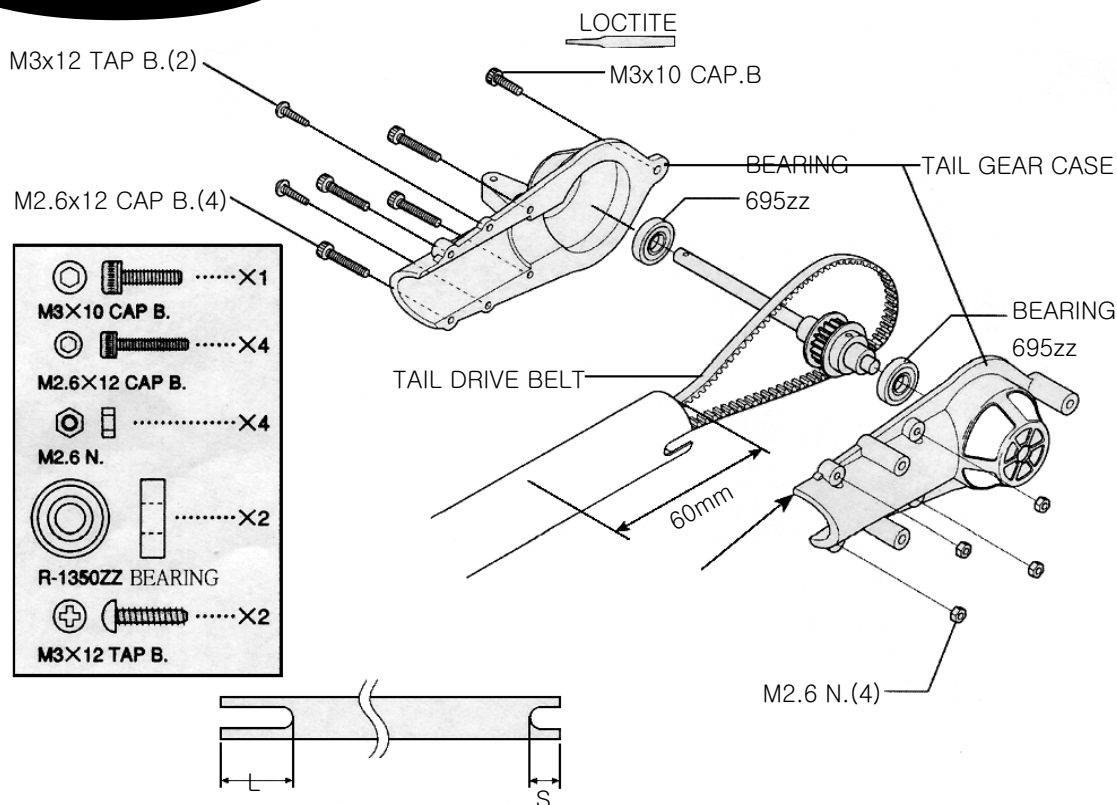

# DNHP Manual


## 5 - 3
 
### ASSEMBLING CENTER HUB

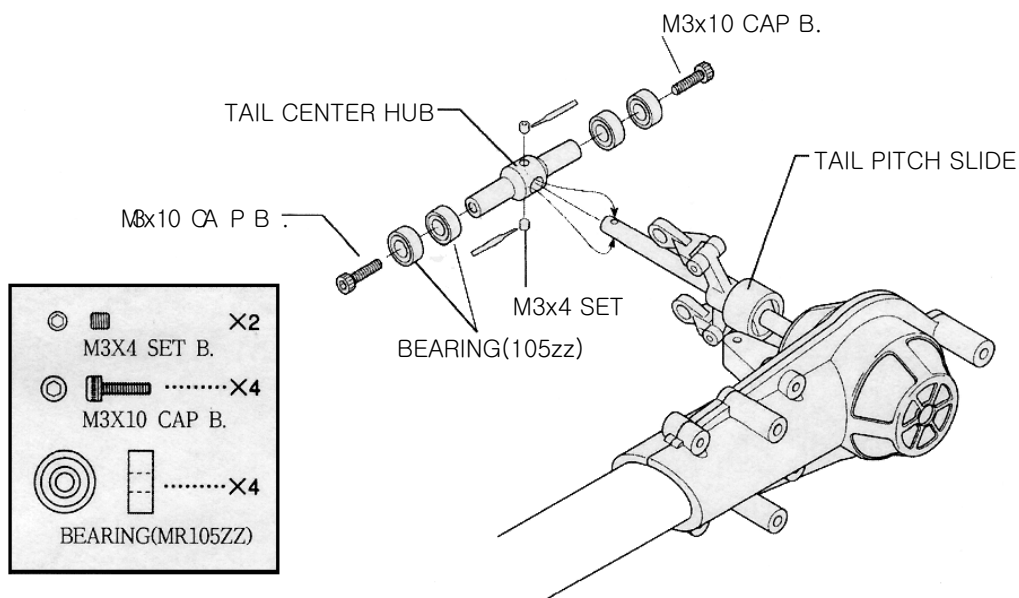

## 5 - 4




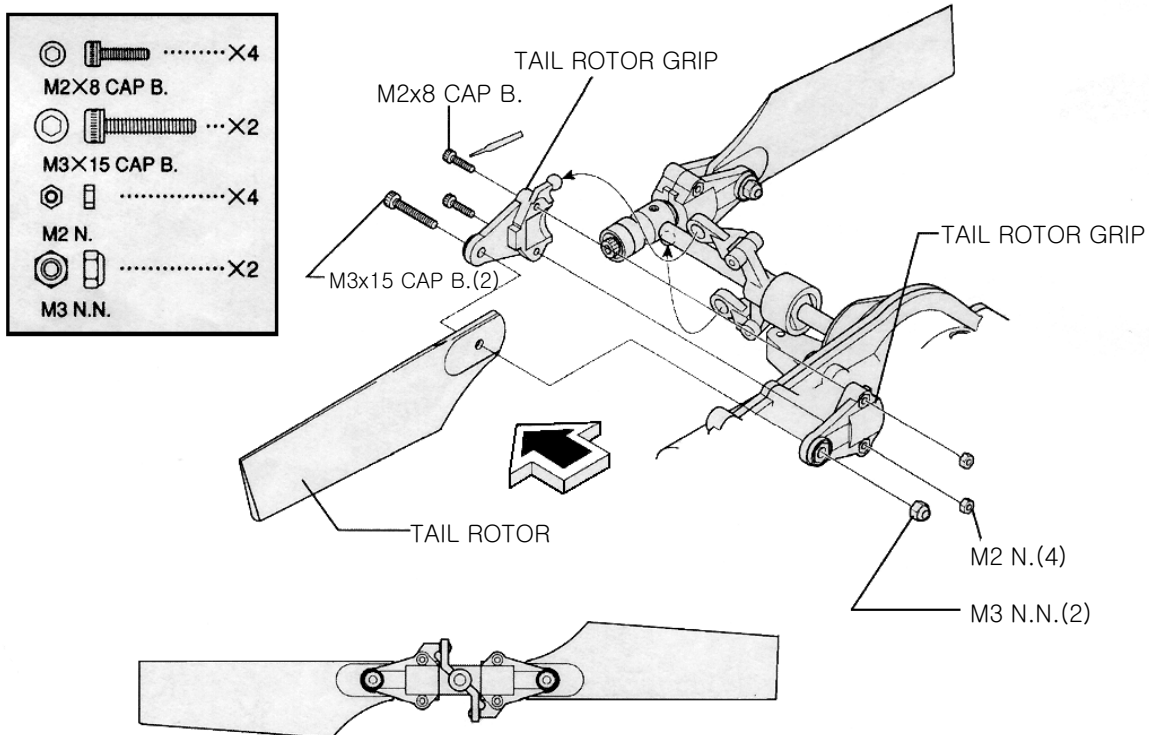 

### ASSEMBLING TAIL ROTOR GRIP



 
# DNHP Manual

**5 - 5**



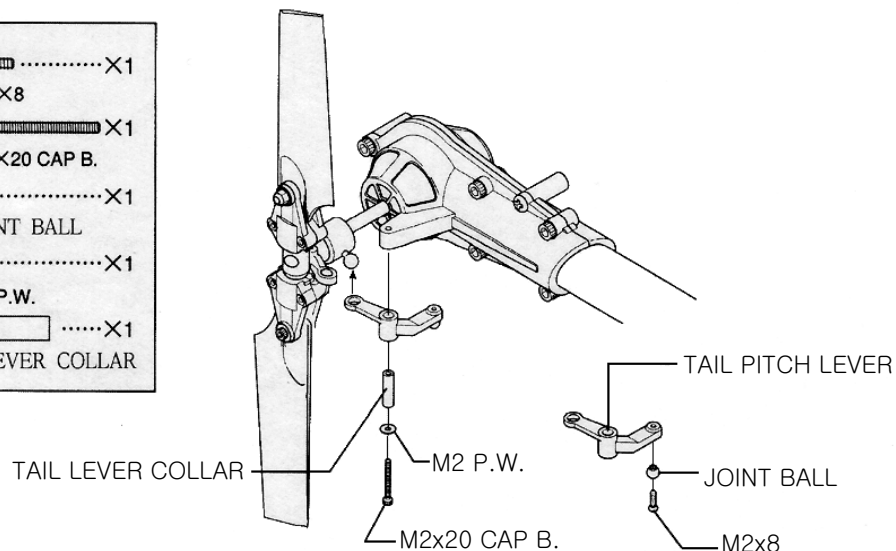 

## INSTALLATION TAIL CONTROL LEVER

 
	.....X1
	M2X8
	.....X1
	M2X20 CAP B.
	.....X1
	JOINT BALL
	.....X1
	M2 P.W.
	.....X1
	TAIL LEVER COLLAR



**5 - 6**

## INSTALLATION TAIL VERT & HORIZ WING

	.....X2
	M3X8 CAP B.
	.....X2
	M3X12 CAP B.
	.....X3
	M3X12 TAP B.
	.....X4
	M3 N.N.


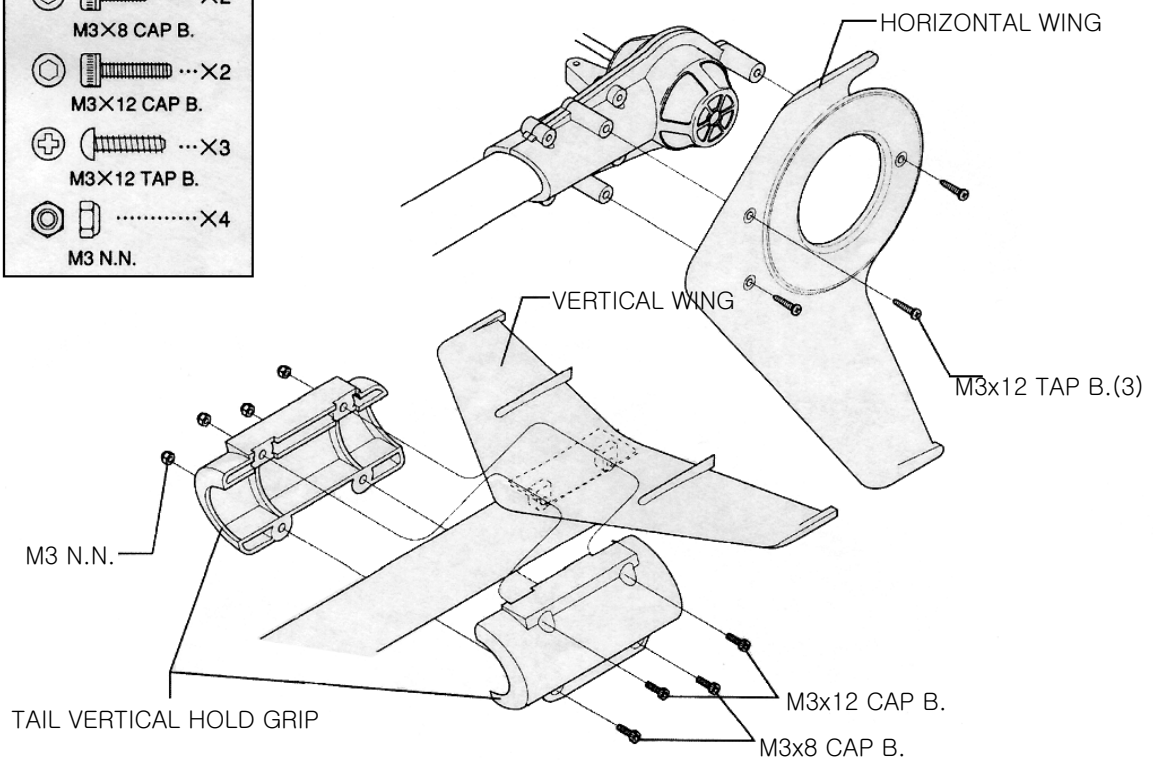




# DNHP Manual



5 - 7
  
## INSTALLATION TAIL BOOM GRIP

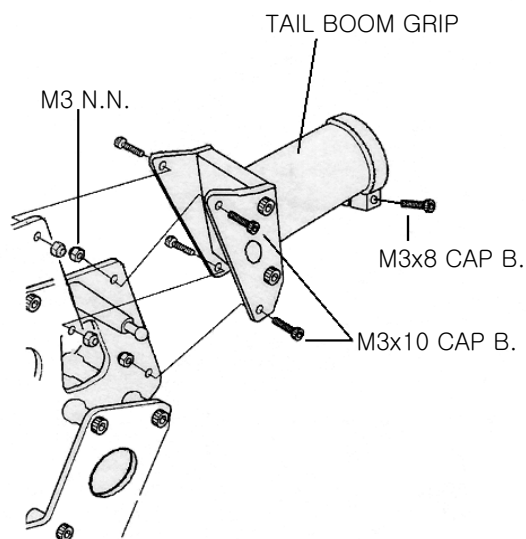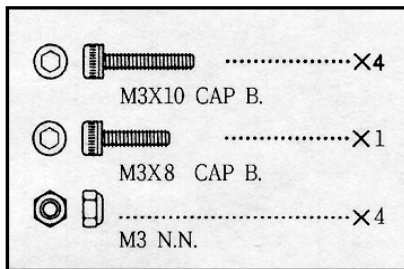

5 - 8


## INSTALLATION TAIL BOOM & TAIL BELT

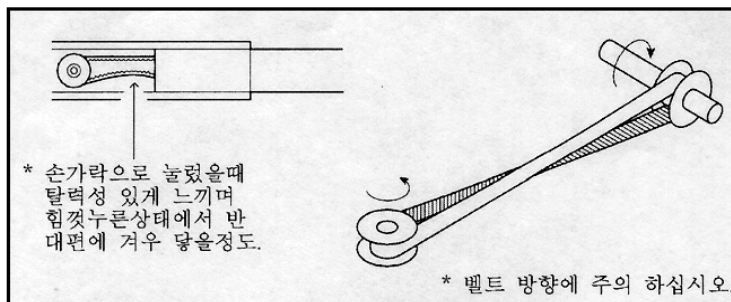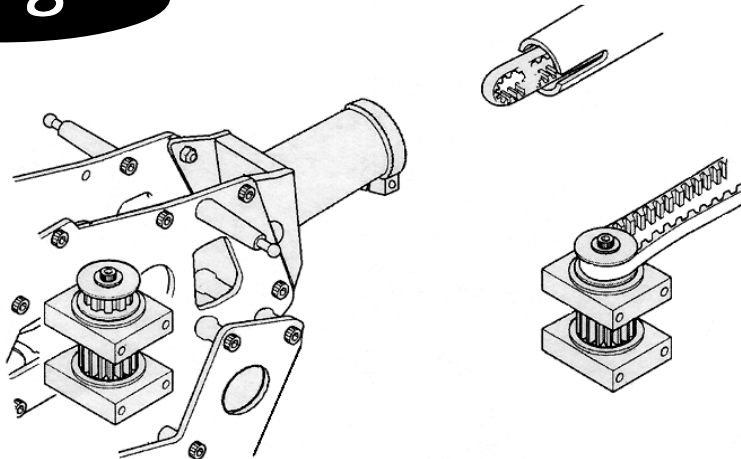  

# DNHP Manual


5 - 9
 
## ASSEMBLING TAIL SUPPORT

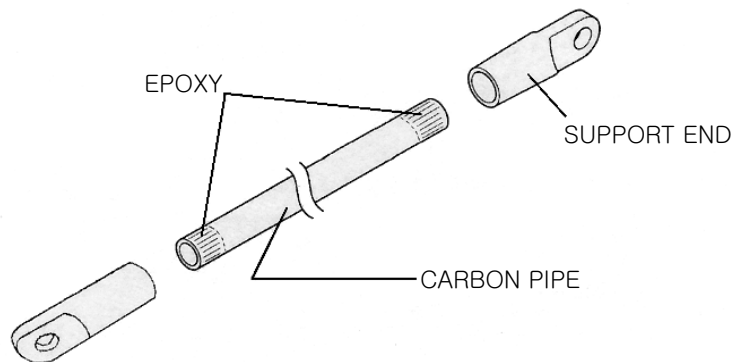

5 - 10


## ASSEMBLING TAIL SUPPORT

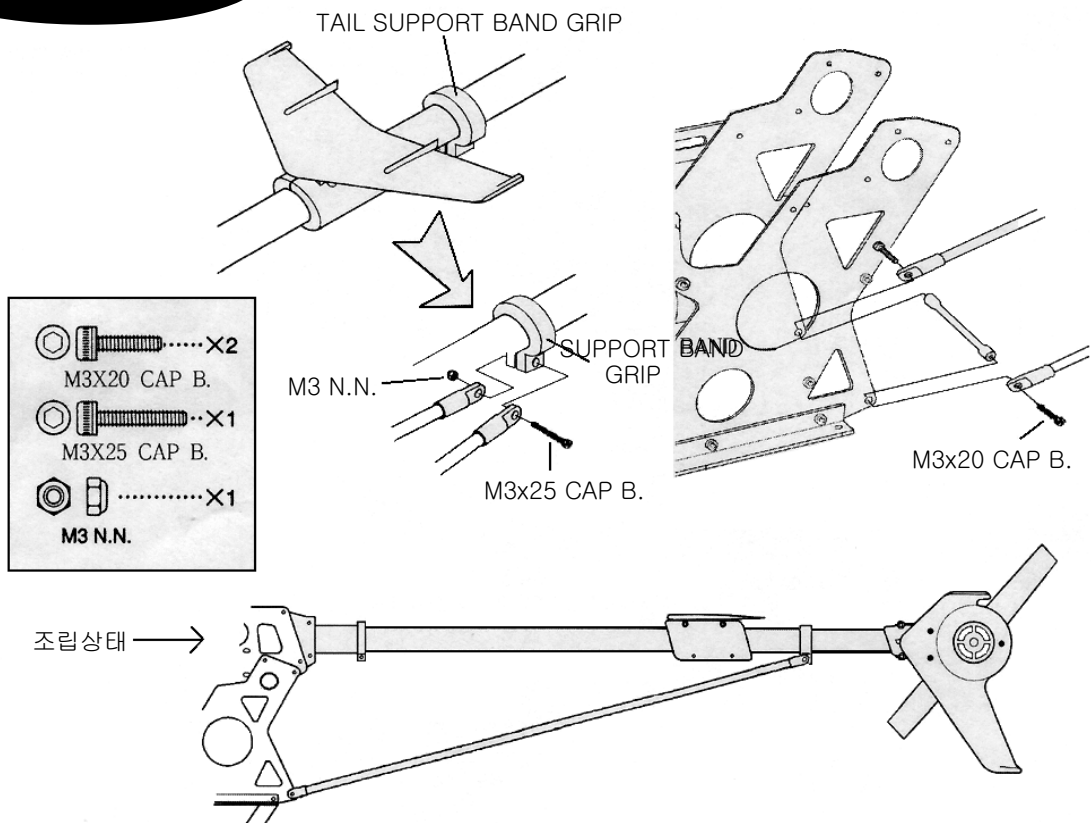 

# DNHP Manual

## 6 - 1

 
## ASSEMBLING SERVO & SWITCH

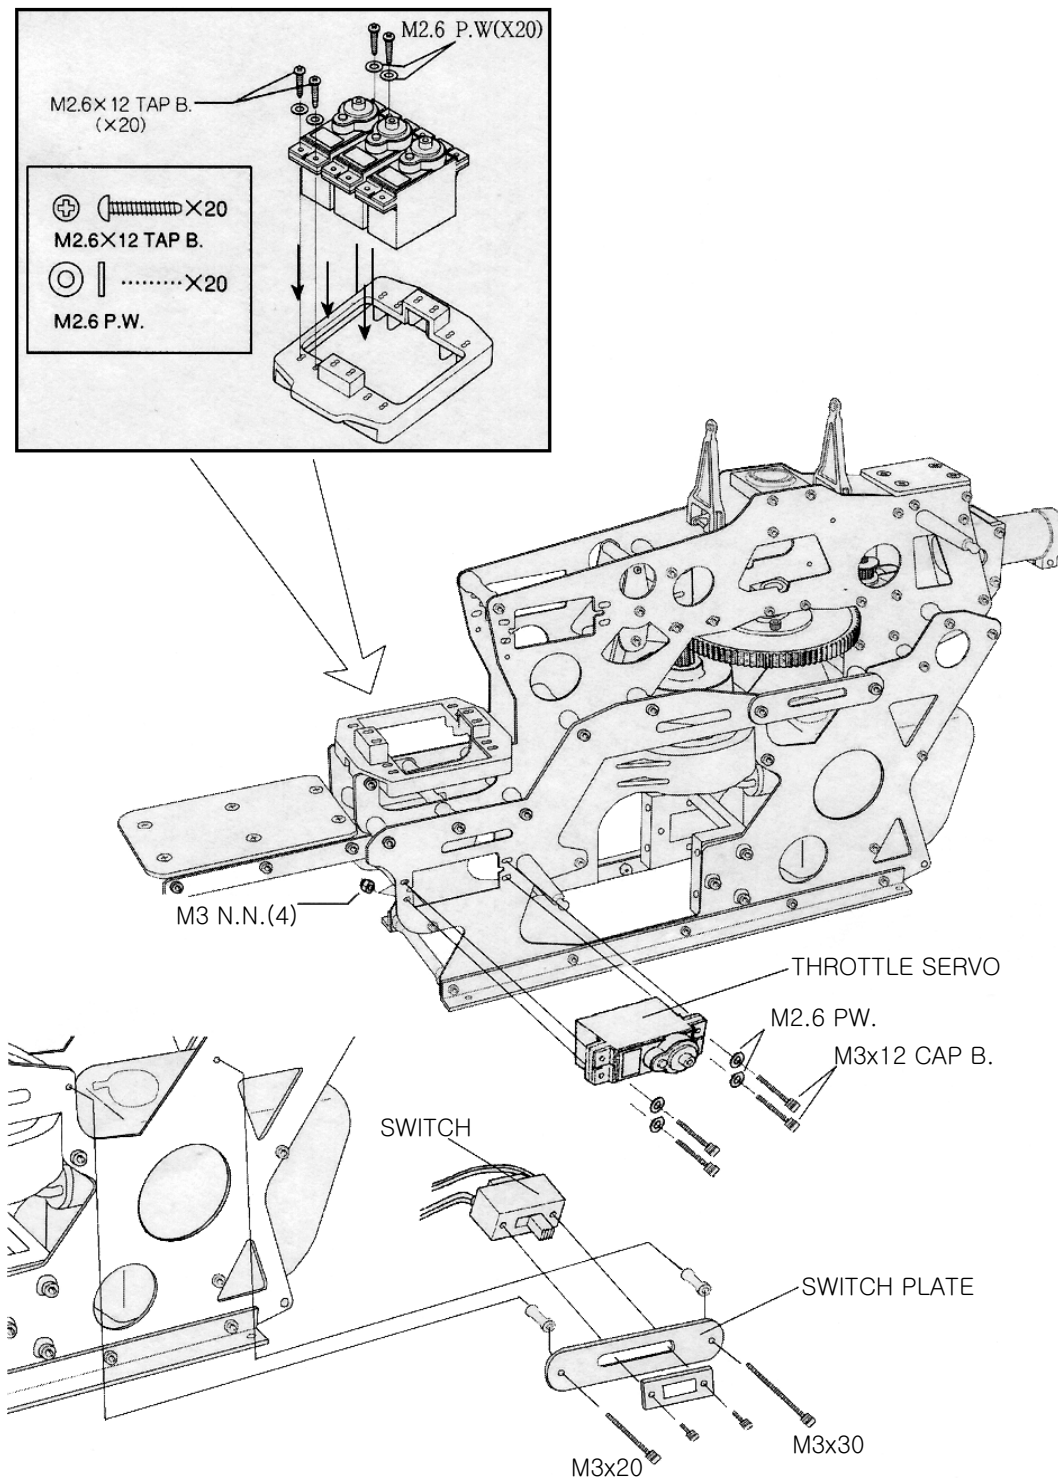

## 6 - 2

## ASSEMBLING TAIL ROD & GUIDE



 
---

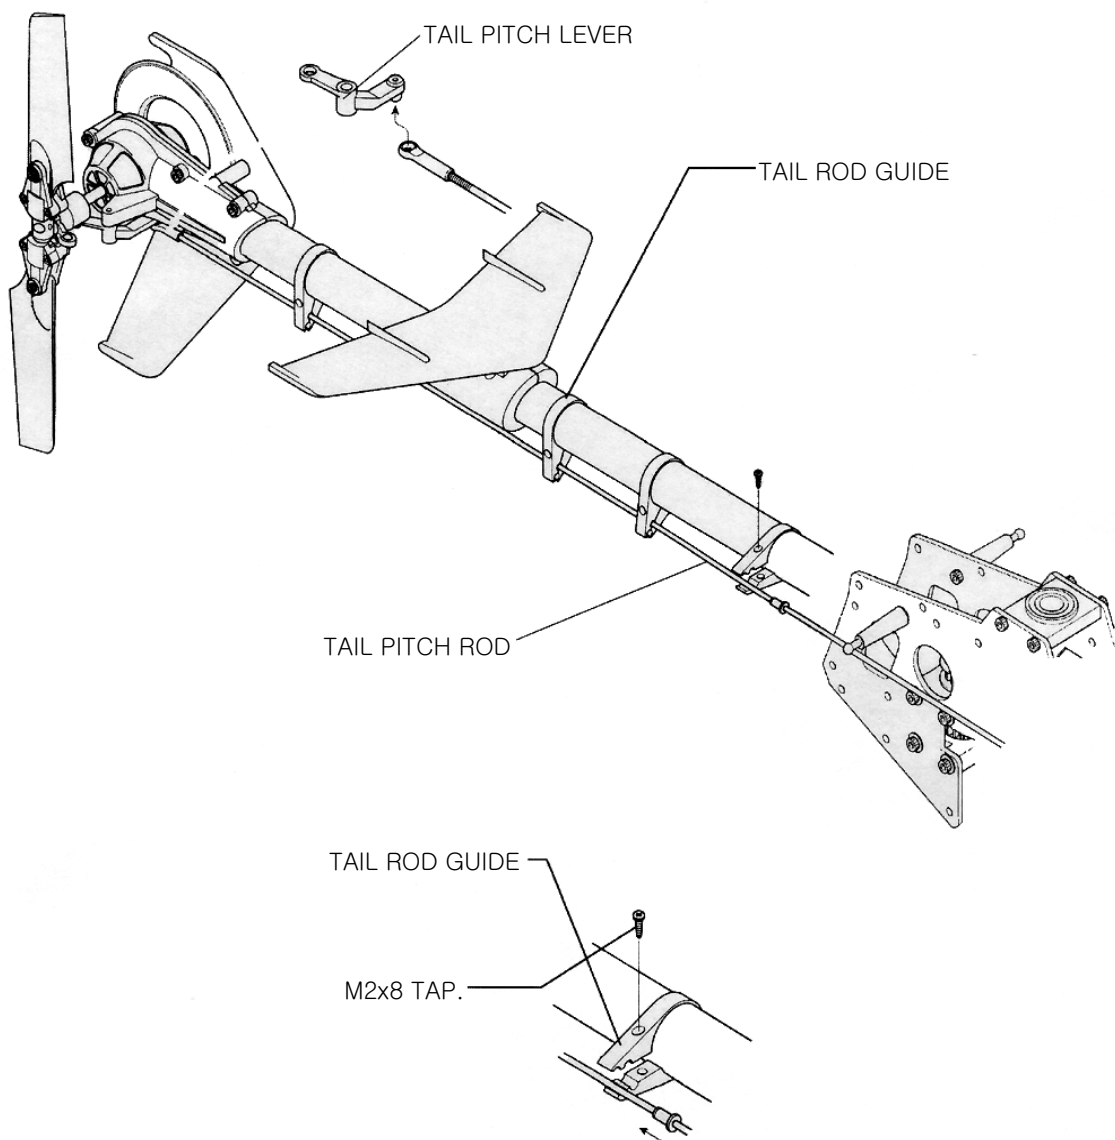



# DNHP Manual

## 7 - 1
   
## AILERON LINKGE SETTING



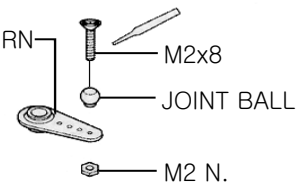
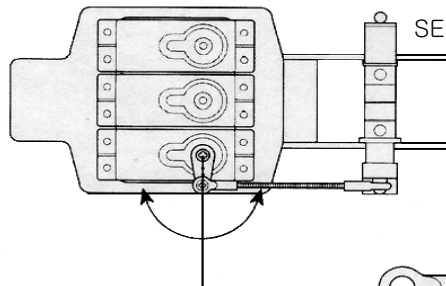
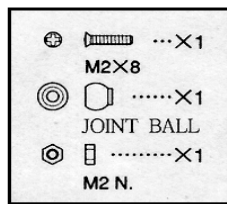


흔에 필요외 부분은 절단하십시오.

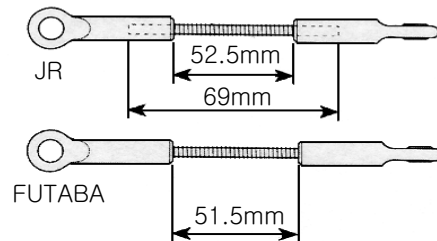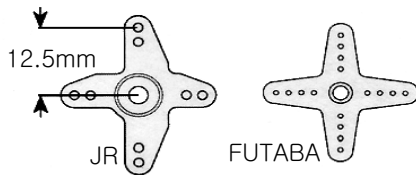  

## 7 - 2
     
## ELEVATOR LINKGE SETTING

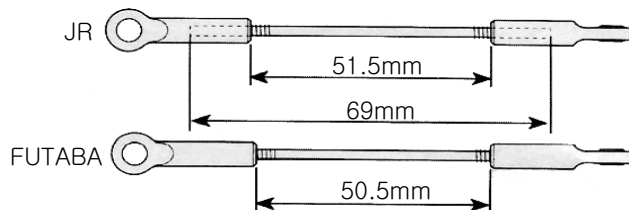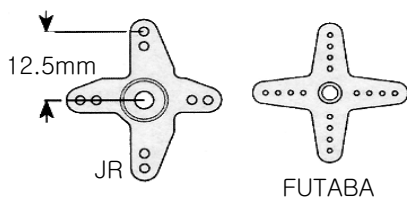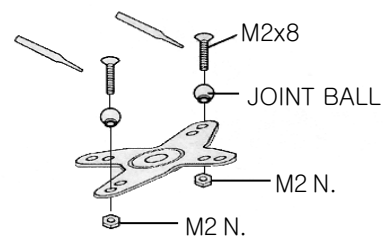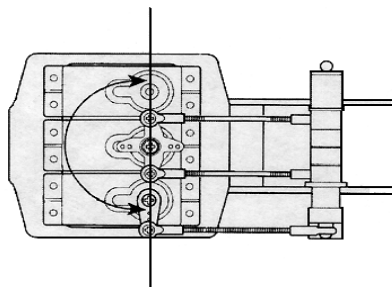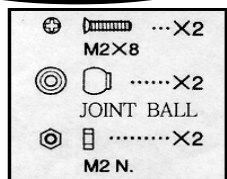


흔에 필요외 부분은 절단하십시오.

# DNHP Manual

 
## 7 - 3

### PITCH LINKGE SETTING

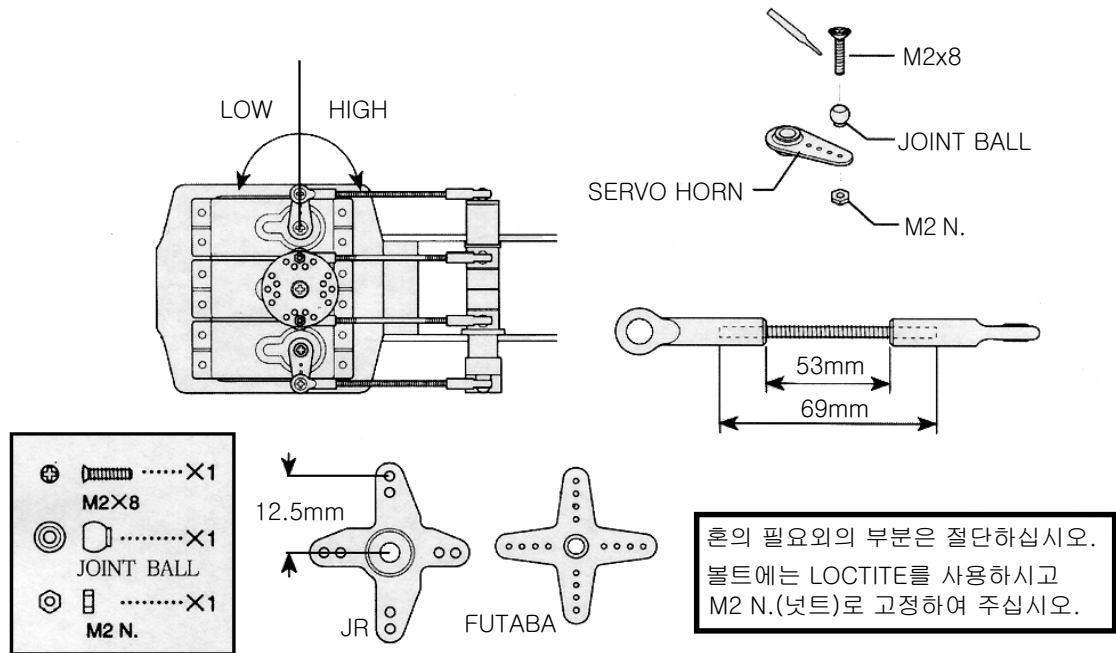

## 7 - 4


 
### RUDDER LINKGE SETTING

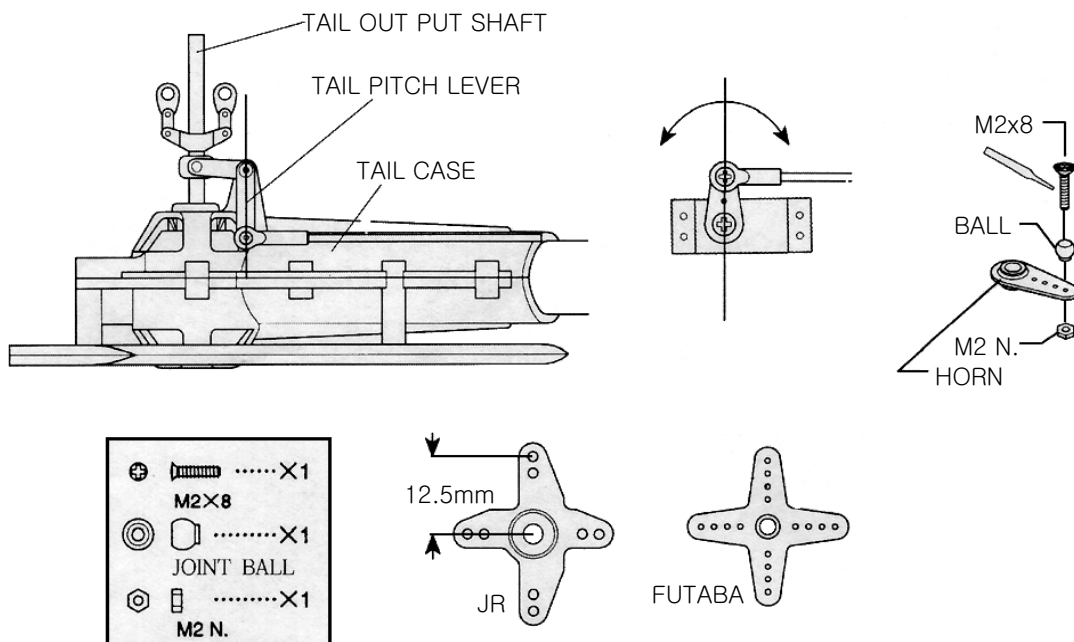


# DNHP Manual

## 7 - 5

 
 
## THROTTLE LINKGE SETTING

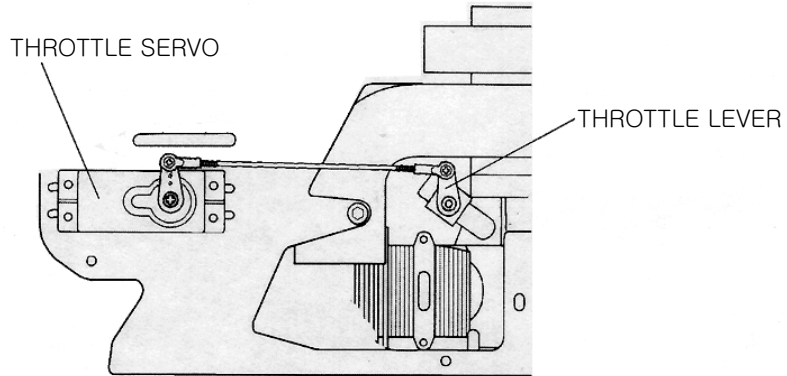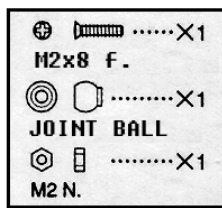

### HORN & ROD (JR HORN)

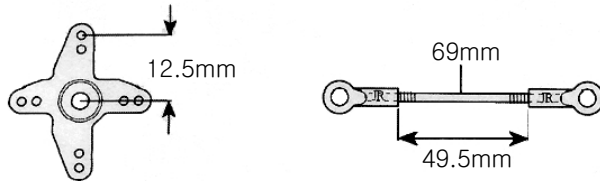 

### HORN & ROD (FUTABA HORN)

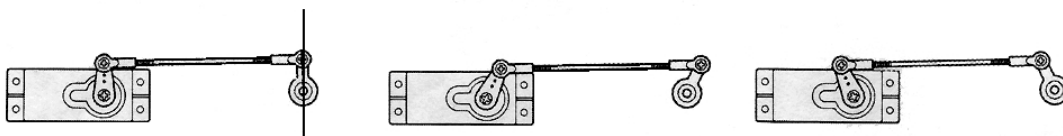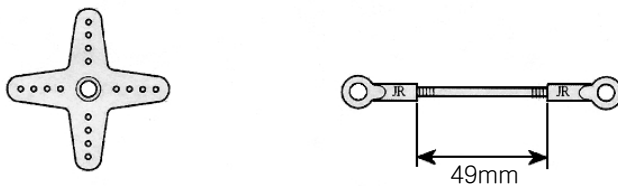  

(1) 스틱을 중립위치  
(호버링)

(2) 스틱을 내린위치  
(LOW)

(3) 스틱을 올린위치  
(HIGH)

- 스틱을 올리거나 내렸을때 서보혼의 회전각도와 스로틀레버의 회전각도가 동일한가를 확인하십시오.(동일한 각이 아니면 자연적으로 스로틀커브가 만들어지는 상태가 됩니다) 윗그림(2)
- 위의 방법으로 되었으면 서보의 전체 움직이는 각도(량)을 조종기에서 조종하여 주십시오. JR에서는 T-AJD로 FUTABA조종기에서는 ATV로 UP/DOWN의 량을 조종하여 주십시오. 윗그림(1)과 (3)